



PROFESSIONAL DIGITAL TWO-WAY RADIO

**MOTOTRBO™**

**DEP 570**

**LIMITED KEYPAD PORTABLE**

**USER GUIDE**



# Declaration of Conformity

## DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



### Responsible Party

Name: Motorola Solutions, Inc.

Address: 1301 East Algonquin Road, Schaumburg, IL 60196-1078, U.S.A.

Phone Number: 1-800-927-2744

Hereby declares that the product:

Model Name: **DEP 570** conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

### **Class B Digital Device**

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Contents

This User Guide contains all information you need to use the MOTOTRBO DEP 570 Digital Portable Radio.

<b>Declaration of Conformity</b> .....	<b>i</b>
<b>Important Safety Information</b> .....	<b>vii</b>
Product Safety and RF Exposure Compliance ..	vii
<b>Firmware Version</b> .....	<b>vii</b>
<b>Computer Software Copyrights</b> .....	<b>viii</b>
<b>Handling Precautions</b> .....	<b>ix</b>
<b>Getting Started</b> .....	<b>1</b>
How to Use This Guide .....	1
What Your Dealer/System Administrator Can Tell You .....	1
<b>Preparing Your Radio for Use</b> .....	<b>2</b>
Charging the Battery .....	2
Attaching the Battery .....	3
Attaching the Antenna .....	3
Attaching the Belt Clip .....	4
Attaching the Universal Connector Cover (Dust Cover) .....	4
Attaching the Accessory Connector .....	5
Powering Up the Radio .....	5

Adjusting the Volume .....	6
<b>Identifying Radio Controls</b> .....	<b>7</b>
Radio Controls .....	8
Programmable Buttons .....	9
Assignable Radio Functions .....	9
Assignable Settings or Utility Functions .....	11
Accessing the Programmed Functions .....	11
Push-To-Talk (PTT) Button .....	12
Switching Between Conventional Analog and Digital Mode .....	13
Identifying Status Indicators .....	13
Display Icons .....	14
Call Icons .....	15
Advanced Menu Icons .....	16
Mini Notice Icons .....	16
LED Indicator .....	17
Audio Tones .....	18
Indicator Tones .....	18
<b>Making and Receiving Calls</b> .....	<b>19</b>
Selecting a Zone .....	19
Selecting a Channel .....	20
Receiving and Responding to a Radio Call .....	20
Receiving and Responding to a Group Call .....	21
Receiving and Responding to a Private Call .....	22
Receiving an All Call .....	23



Receiving and Responding to a Selective Call . . . . .	23	Setting Default Contact . . . . .	42
Receiving and Responding to a Phone Call . . . . .	24	Call Indicator Settings . . . . .	42
Making a Radio Call . . . . .	25	Activating and Deactivating Call Ringers for	
Making a Call with the Channel Selector Knob . . . . .	26	Call Alert . . . . .	42
Making a Selective Call . . . . .	28	Activating and Deactivating Call Ringers for	
Stopping a Radio Call . . . . .	31	Private Calls . . . . .	43
Talkaround . . . . .	32	Activating and Deactivating Call Ringers for	
Monitoring Features . . . . .	32	Selective Call . . . . .	43
Monitoring a Channel . . . . .	32	Assigning Ring Styles . . . . .	44
Permanent Monitor . . . . .	33	Escalating Alarm Tone Volume . . . . .	44
<b>Advanced Features . . . . .</b>	<b>34</b>	Call Log Features . . . . .	45
Radio Check . . . . .	34	Viewing Recent Calls . . . . .	45
Sending a Radio Check . . . . .	34	Deleting a Call from a Call List . . . . .	45
Scan Lists . . . . .	35	Call Alert Operation . . . . .	46
Viewing an Entry in the Scan List . . . . .	35	Receiving and Responding to a Call Alert . . . . .	46
Editing the Scan List . . . . .	36	Making a Call Alert from the Contacts List . . . . .	47
Scan . . . . .	37	Making a Call Alert with the One Touch Access	
Starting and Stopping Scan . . . . .	38	Button . . . . .	47
Responding to a Transmission During a Scan . . . . .	38	Emergency Operation . . . . .	48
Deleting a Nuisance Channel . . . . .	39	Sending an Emergency Alarm . . . . .	49
Restoring a Nuisance Channel . . . . .	39	Sending an Emergency Alarm with Call . . . . .	49
Vote Scan . . . . .	39	Sending an Emergency Alarm with Voice to	
Contacts Settings . . . . .	40	Follow . . . . .	50
Making a Group Call from Contacts . . . . .	40	Reinitiating an Emergency Mode . . . . .	51
Making a Private Call from Contacts . . . . .	41	Exiting Emergency Mode . . . . .	52
		Analog Message Encode . . . . .	53

Sending MDC Message Encode to Dispatcher . . .	53
Sending 5-Tone Message Encode to Contact . . .	53
Analog Status Update . . . . .	54
Sending Status Update to Predefined Contact . . .	54
Viewing a 5-Tone Status Details . . . . .	54
Privacy . . . . .	55
Security . . . . .	56
Radio Disable . . . . .	56
Radio Enable . . . . .	57
Lone Worker . . . . .	58
Password Lock Features . . . . .	58
Accessing the Radio from Password . . . . .	58
Unlocking the Radio from Locked State . . . . .	59
Turning the Password Lock On or Off . . . . .	59
Changing the Password . . . . .	60
Notification List . . . . .	60
Accessing the Notification List . . . . .	61
Auto-Range Transponder System (ARTS) . . . . .	61
Over-the-Air Programming (OTAP) . . . . .	62
Utilities . . . . .	62
Turning the Radio Tones/Alerts On or Off . . . . .	62
Setting the Tone Alert Volume Offset Level . . . . .	63
Turning the Talk Permit Tone On or Off . . . . .	63
Turning the Power Up Tone On or Off . . . . .	64

Setting the Power Level . . . . .	64
Adjusting the Display Brightness . . . . .	65
Controlling the Display Backlight . . . . .	65
Setting the Squelch Level . . . . .	66
Turning the Introduction Screen On or Off . . . . .	66
Language . . . . .	67
Turning the LED Indicator On or Off . . . . .	67
Turning the Voice Operating Transmission (VOX) Feature On or Off . . . . .	68
Voice Announcement . . . . .	68
Call Forwarding . . . . .	69
Menu Timer . . . . .	70
Analog Mic AGC (Mic AGC-A) . . . . .	70
Digital Mic AGC (Mic AGC-D) . . . . .	71
Intelligent Audio . . . . .	71
Accessing General Radio Information . . . . .	72
RSSI Values . . . . .	73
Front Panel Programming (FPP) . . . . .	74
Entering FPP Mode . . . . .	74
Editing FPP Mode Parameters . . . . .	74
<b>Accessories . . . . .</b>	<b>75</b>
Antennas . . . . .	75
Batteries . . . . .	75
Cables . . . . .	75
Carry Devices . . . . .	75

Chargers . . . . .	76
Earbuds and Earpieces . . . . .	77
Headsets and Headset Accessories . . . . .	77
Remote Speaker Microphones . . . . .	77
Surveillance Accessories . . . . .	77
Miscellaneous Accessories . . . . .	78
<b>Batteries and Chargers Warranty . . . . .</b>	<b>80</b>
<b>Limited Warranty . . . . .</b>	<b>81</b>

## Important Safety Information

### Product Safety and RF Exposure Compliance



Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.**

Before using this product, read the RF energy awareness information and operating instructions in the DEP 500 Series Portable Radio Regulatory Compliance and Product Safety / Quick Reference Guide booklet enclosed with your radio

(Motorola Publication part number 68012004091) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorola.com/radiosolutions>

## Firmware Version

All the features described in the following sections are supported by the radio's software version **R02.05.00**.

See ***Checking the Firmware Version and Codeplug Version and Codeplug Version*** on page 73 to determine your radio's software version.

Check with your dealer or system administrator for more details of all the features supported.

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

The AMBE+2™ voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Pat. Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

## Handling Precautions

The MOTOTRBO DEP 570 Portable Radio meets IP55 specifications with antenna attached, allowing the radio to withstand adverse field conditions such as being used in rain or dusty environment.

- If the radio has been exposed to water or rain, shake the radio well to remove any water that may be trapped inside the speaker grille, microphone port and aesthetic cover (if applicable). Trapped water in speaker grille and microphone port could cause decreased audio performance. If aesthetic cover is attached onto radio, trapped water in aesthetic cover could cause corrosion on the slim connector interface gold contacts.
- If the radio's battery contact area has been exposed to water, clean and dry battery contacts on both the radio and the battery before attaching the battery to the radio. The residual water could short-circuit the radio.
- If the radio has been exposed to corrosive substance (e.g. saltwater), rinse the radio and battery in fresh water then dry the radio and battery.
- To clean the exterior surfaces of the radio, use a diluted solution of mild dishwashing detergent and fresh water (i.e. one teaspoon of detergent to one gallon of water).
- The radio with antenna attached properly is designed to be protected against dust and low pressure jets of water projected with nozzle 6.3mm diameter at flow rate of 12.5 l/min, with water pressure at 30 kN/m<sup>2</sup> and from a

distance of 2.5m to 3m for at least 3 min. Exceeding either maximum limit or use without antenna may result in damage to the radio.

- When cleaning the radio, do not use a high pressure jet spray on the radio as this may cause to leak.



Caution

Do not disassemble the radio. This could damage radio seals and result in leak paths into the radio. Radio maintenance should only be done in service depot that is equipped to test and replace the seal on the radio.

## Getting Started

Take a moment to review the following:

How to Use This Guide . . . . .	page 1
What Your Dealer/System Administrator Can Tell You . . . . .	page 1

### How to Use This Guide

This User Guide covers the basic operation of the MOTOTRBO Portables.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

Throughout this publication, the icons below are used to indicate features supported in either the conventional Analog mode or conventional Digital mode:



Indicates a conventional Analog Mode-Only feature.



Indicates a conventional Digital Mode-Only feature.

For features that are available in **both** conventional Analog and Digital modes, **no** icon is shown.

### What Your Dealer/System Administrator Can Tell You

You can consult your dealer or system administrator about the following:

- Is your radio programmed with any preset conventional channels?
- Which buttons have been programmed to access other features?
- What optional accessories may suit your needs?
- What are the best radio usage practices for effective communication?
- What maintenance procedures will help promote longer radio life?

## Preparing Your Radio for Use

Assemble your radio by following these steps:

- Charging the Battery . . . . . page 2
- Attaching the Battery . . . . . page 3
- Attaching the Antenna . . . . . page 3
- Attaching the Belt Clip . . . . . page 4
- Attaching the Universal Connector  
Cover (Dust Cover) . . . . . page 4
- Powering Up the Radio . . . . . page 5
- Adjusting the Volume. . . . . page 6

## ■ Charging the Battery



Your radio is powered by a Lithium-Ion (Li-Ion) battery. To avoid damage and comply with warranty terms, charge the battery using a Motorola charger *exactly* as described in the charger user guide. It is recommended your radio remains powered off while charging.

Charge a new battery 14 to 16 hours before initial use for best performance.

**IMPORTANT:** **ALWAYS** charge your IMPRES battery with an IMPRES charger for optimized battery life and valuable battery data. IMPRES batteries charged exclusively with IMPRES chargers receive a 6-month capacity warranty extension over the standard Motorola Premium battery warranty duration.

## ■ Attaching the Battery

Align the battery with the rails on the back of the radio. Press the battery firmly, and slide upwards until the latch snaps into place.

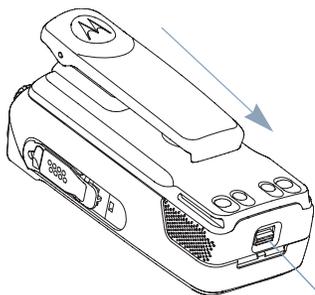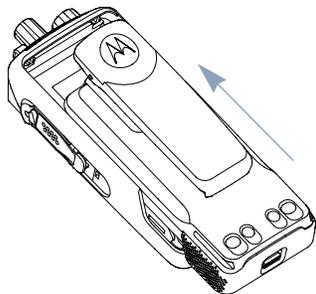


Battery Latch

*To remove the battery, turn the radio off. Move the battery latch into unlock position and hold, and slide the battery down and off the rails.*

## ■ Attaching the Antenna

With the radio turned off, set the antenna in its receptacle and turn clockwise.

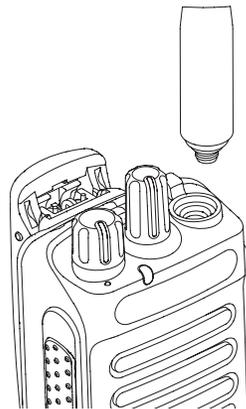

*To remove the antenna, turn the antenna counterclockwise.*




Caution

If antenna needs to be replaced, ensure that only MOTOTRBO antennas are used. Neglecting this will damage your radio. See **Antennas** on page 75 for a list of available antennas.

## ■ Attaching the Belt Clip


Align the grooves on the clip with those on the battery and press downwards until you hear a click.

*To remove the clip, press the belt clip tab away from the battery using a key. Then slide the clip upwards and away from the radio.*

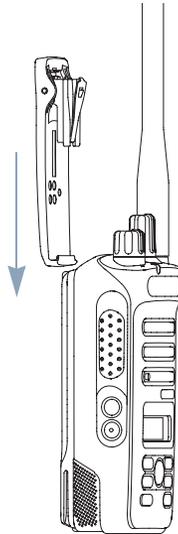

## ■ Attaching the Universal Connector Cover (Dust Cover)

The universal connector is located on the antenna side of the radio. It is used to connect MOTOTRBO accessories to the radio.

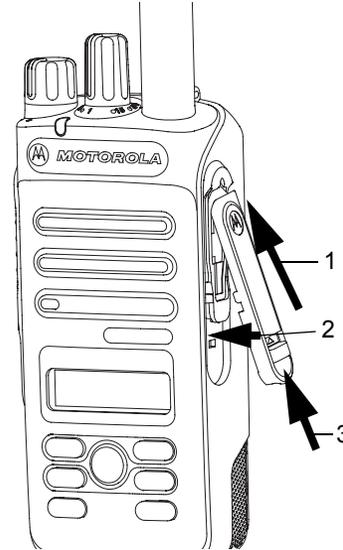

Insert the slanted end of the cover into the slots above the universal connector. Press downwards on the cover to seat the dust cover properly on the Universal Connector.

Secure the dust cover to the radio by pushing the latch upwards.


*To remove the dust cover, push the latch downwards. Lift the cover up and slide down the dust cover from the universal connector to remove it.*

*Replace the dust cover when the universal connector is not in use.*


## ■ Attaching the Accessory Connector

The accessory connector is to be secured to the universal connector on the antenna side of the radio.

To attach the accessory connector, refer to the steps shown in the diagram.

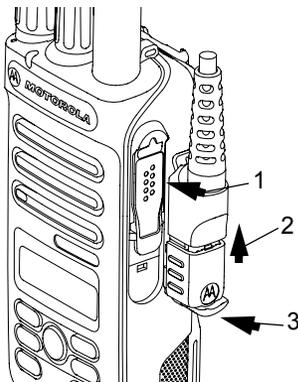


To remove the accessory connector, refer to the steps shown in the diagram.

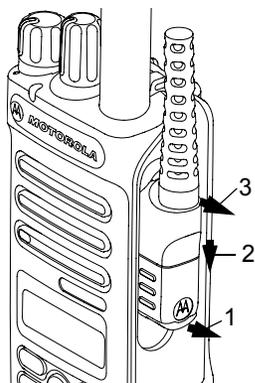

## ■ Powering Up the Radio

Rotate the **On/Off/Volume Control Knob** clockwise until you hear a click. You see **MOTOTRBO (TM)** on the radio's display momentarily, followed by a welcome message.

The LED lights up solid green and the Home screen lights up if the backlight setting is set to turn on automatically.

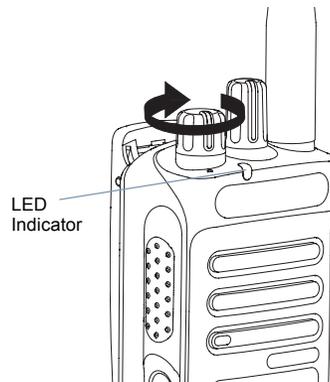

**NOTE:** The Home screen does not light up during a power up if the LED indicator is disabled (see **Turning the LED Indicator On or Off** on page 67).

A brief tone sounds, indicating that the power up test is successful.

**NOTE:** There is no power up tone if the radio tones/alerts function is disabled (see **Turning the Radio Tones/ Alerts On or Off** on page 62).

If your radio does not power up, check your battery. Make sure that it is charged and properly attached. If your radio still does not power up, contact your dealer.


*To turn off the radio, rotate this knob counterclockwise until you hear a click. You see a brief *Powering Down* on the radio's display.*

## ■ Adjusting the Volume

To increase the volume, turn the **On/Off/Volume Control Knob** clockwise.

*To decrease the volume, turn this knob counterclockwise.*

**NOTE:** Your radio can be programmed to have a minimum volume offset where the volume level cannot be turned down fully. Check with your dealer or system administrator for more information.

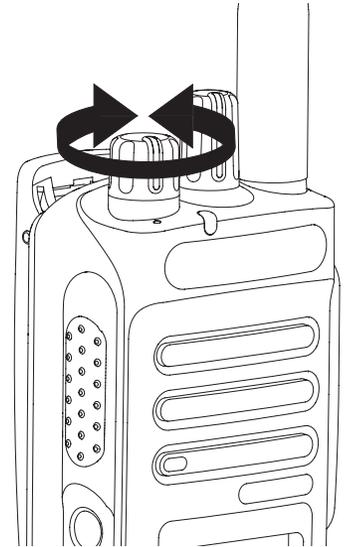


---

## Identifying Radio Controls

Take a moment to review the following:

Radio Controls . . . . . page 8  
Programmable Buttons . . . . . page 9  
Accessing the Programmed Functions . . . . . page 11  
Push-To-Talk (PTT) Button . . . . . page 12  
Switching Between Conventional Analog and  
Digital Mode. . . . . page 13

## Radio Controls

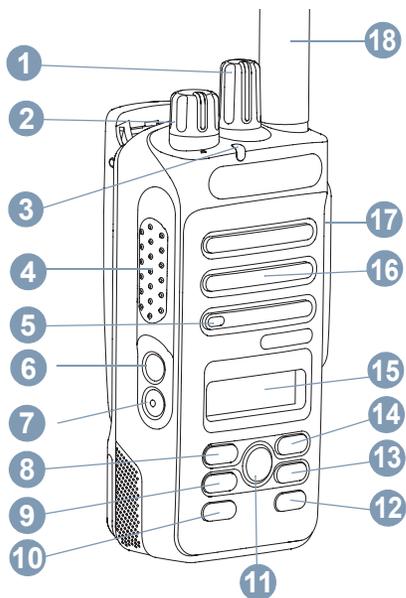

- 1 Channel Selector Knob
- 2 On/Off/Volume Control Knob
- 3 LED Indicator

- 4 Push-to-Talk (PTT) Button
- 5 Microphone
- 6 Side Button 1\*
- 7 Side Button 2\*
- 8 Left Navigation Button
- 9 Menu Button
- 10 Front Button P1\*
- 11 OK Button
- 12 Front Button P2\*
- 13 Back/Home Button
- 14 Right Navigation Button
- 15 Display
- 16 Speaker
- 17 Universal Connector for Accessories
- 18 Antenna

\* These buttons are programmable.

## ■ Programmable Buttons

---

Your dealer can program the programmable buttons as shortcuts to **radio functions** or **preset channels/groups** depending on the duration of a button press:

- Short press – Pressing and releasing rapidly.
- Long press – Pressing and holding for the programmed duration.
- Hold down – Keeping the button pressed.

**NOTE:** The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See **Emergency Operation** on page 48 for more information on the programmed duration of the Emergency button.

## 📄 Assignable Radio Functions

**Contacts** – Provides direct access to the Contacts list.

**Call Alert** – Direct access to the radio contacts list to select a radio contact to send a call alert to.

**Call Forwarding** – Toggles Call Forwarding on or off.

**Call Log** – Selects the call log list.

**Channel Announcement** – Plays zone and channel announcement voice messages for the current channel.

**Emergency** – Depending on the programming, initiates or cancels an emergency alarm or call.

**Intelligent Audio On/Off** – Toggles intelligent Audio on or off.

**Manual Site Roam**  – Starts the manual site search.

**Mic AGC On/Off** – Toggles the internal microphone automatic gain control (AGC) on or off.

**Monitor** – Monitors a selected channel for activity.

**Notifications** – Provides direct access to the Notifications List.

**Nuisance Channel Delete** – Temporarily removes an unwanted channel, except for the Selected Channel, from the scan list. The Selected Channel refers to the user's selected zone/channel combination from which scan is initiated.

**One Touch Access**  – Directly initiates a predefined Private, Phone or Group Call or a Call Alert. **Permanent Monitor** – Monitors a selected channel for all radio traffic until function is disabled.

**Phone**  – Provides direct access to the Phone Contacts list.

**Privacy**  – Toggles privacy on or off.

**Radio Alias and ID** – Provides radio alias and ID.

**Radio Check**  – Determines if a radio is active in a system.

**Radio Enable**  – Allows a target radio to be remotely enabled.

**Radio Disable**  – Allows a target radio to be remotely disabled.

**Repeater/Talkaround** – Toggles between using a repeater and communicating directly with another radio.

**Scan** – Toggles scan on or off. **Site Lock On/Off**  – Toggles the automatic site roam on or off.

**Transmit Interrupt Remote Dekey**  – Stops the transmission of a remote monitored radio without giving any indicators, or an ongoing interruptible call to free the channel. (A Software License Key sold separately is required to use this feature).

**Voice Announcement On/Off** – Toggles Voice Announcement on or off.

**Voice Operating Transmission (VOX)** – Toggles VOX on or off.

**Zone** – Allows selection from a list of zones.

## 📄 Assignable Settings or Utility Functions

**All Tones/Alerts** – Toggles all tones and alerts on or off.

**Backlight** – Toggles display backlight on or off.

**Backlight brightness** – Adjusts the brightness level.

**Power Level** – Toggles transmit power level between high and low.

**Squelch**  – Toggles squelch level between tight and normal.

## ■ Accessing the Programmed Functions

You can access various radio functions through one of the following ways:

- A short or long press of the relevant programmable buttons.

OR




- Use the Menu Navigation Buttons as follows:

- 1 To access the menu, press the  button. Press the appropriate **Menu Scroll** button ( or ) to access the menu functions.
- 2 To select a function or enter a sub-menu, press the  button.
- 3 To go back one menu level, or to return to the previous screen, press the  button. Long press the  button to return to the Home screen.

**NOTE:** Your radio automatically exits the menu after a period of inactivity and returns to your Home screen.

## ■ Push-To-Talk (PTT) Button

The **PTT** button on the side of the radio serves two basic purposes:

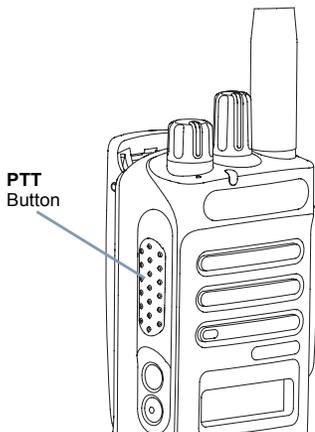

- While a call is in progress, the **PTT** button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.

The microphone is activated when the **PTT** button is pressed.


- While a call is not in progress, the **PTT** button is used to make a new call (see **Making a Radio Call** on page 25).

If the Talk Permit Tone (see **Turning the Talk Permit Tone On or Off** on page 63) or the **PTT Sidetone**  is enabled, wait until the short alert tone ends before talking.

-  During a call, if the Channel Free Indication feature is enabled on your radio (programmed by your dealer), you will hear a short alert tone the moment the target radio (the radio that is receiving your call) releases the **PTT** button, indicating the channel is free for you to respond.
-  You will also hear a continuous talk prohibit tone, if your call is interrupted, indicating that you should release the **PTT** button, for example when the radio receives an Emergency Call.

## ■ Switching Between Conventional Analog and Digital Mode

Each channel in your radio can be configured as a conventional analog or conventional digital channel. Use the Channel Selector Knob to switch between an analog or a digital channel.

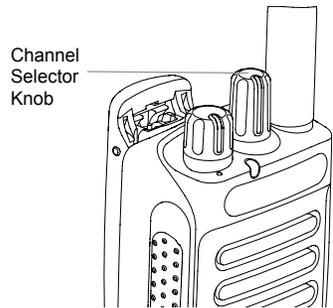

When switching from digital to analog mode, certain features are unavailable. Icons for the digital features (such as Messages) reflect this change by appearing 'grayed out'. Disabled features are hidden in the menu.

Your radio also has features available in both analog and digital mode. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

Your radio also switches between digital and analog modes during a dual mode scan (see **Scan** on page 37).

## ■ Identifying Status Indicators

Your radio indicates its operational status through the following:

Display Icons . . . . .	page 14
Call Icons . . . . .	page 15
Advanced Menu Icons . . . . .	page 16
Mini Notice Icons . . . . .	page 16
Audio Tones . . . . .	page 18
Indicator Tones . . . . .	page 18

## ■ Display Icons

The 132 x 36 pixels, monochrome display, liquid crystal display (LCD) of your radio shows radio status, text entries, and menu entries.

The following are icons that appear on the status bar at the top of the radio's display. Icons are displayed on the status bar, arranged left-to-right, in order of appearance/usage.

 **Received Signal Strength Indicator (RSSI)**  
The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. The icon is only displayed while receiving.

 **Battery**  
The number of bars (0 – 4) shown indicates the charge remaining in the battery. Blinks when the battery is low.

 **Emergency**  
Radio is in emergency mode.

 **Notification**  
Notification List has one or more missed events.

 **Scan**  
Scan feature is enabled.

 **Scan – Priority 1**  
Radio detects activity on channel/group designated as Priority 1.

 **Scan Priority 2**  
Radio detects activity on channel/group designated as Priority 2.

 **Vote Scan**  
Vote scan feature is enabled.

 **Monitor**  
Selected channel is being monitored.

 **Over-the-Air Programming Delay Timer**  
Indicates time left before automatic restart of radio.

 **Talkaround**  
In the absence of a repeater, radio is currently configured for direct radio to radio communication.

 **Site Roaming**   
The site roaming feature is enabled.

 **Secure**   
The Privacy feature is enabled.

 **Unsecure**   
The Privacy feature disabled.

 **Tones Disabled**  
Tones are turned off.

**Power Level**

Radio is set at Low Power.

Radio is set at High Power.

**Call Icons**

---

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate ID type.

**Private Call**

Indicates a Private Call in progress. In the Contacts list, it indicates a subscriber alias (name) or ID (number).

**Group Call/All Call**

Indicates a Group Call or All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).

**Phone Call as Private Call**

Indicates a Phone Call as Private Call in progress. In the Contacts list, it indicates a phone alias (name) or ID (number).

**Phone Call as Group/All Call**

Indicates a Phone Call as Group/All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).

## ■ Advanced Menu Icons

---

The following icons appear beside menu items that offer a choice between two options or as an indication that there is a sub-menu offering two options.



Checkbox (Empty)

Indicates the option is not selected.



Checkbox (Checked)

Indicates the option is selected.



Solid Black Box

Indicates the option selected for the menu item with a sub-menu.

## ■ Mini Notice Icons

---

The following icons appear momentarily on the radio's display after an action to perform task is take.



Successful Transmission (Positive)

Successful action taken.



Failed Transmission (Negative)

Failed action taken.




Transmission in Progress (Transitional)

Transmitting. This dynamic icon is seen before indication for Successful Transmission or Failed Transmission.

## ■ LED Indicator

The LED indicator shows the operational status of your radio.

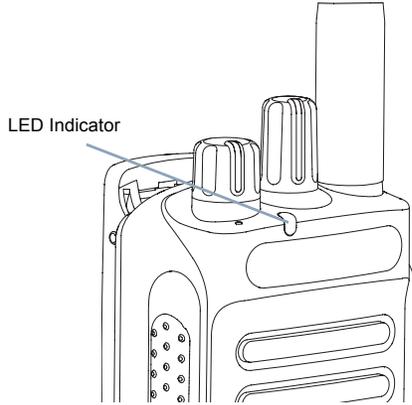

**Blinking red** – Radio is transmitting at low battery condition, receiving an emergency transmission, has failed the self-test upon powering up, or has moved out of range if radio is configured with Auto-Range Transponder System.

**Solid yellow** – Radio is monitoring a conventional channel. Also indicates fair battery charge when programmable button is pressed.

**Blinking yellow** – Radio is scanning for activity or receiving a Call Alert.

**Double blinking yellow** – Auto roaming is enabled, radio is actively searching for a new site. Also indicates radio has yet to respond to a group call alert, or radio is locked.

**Solid green** – Radio is powering up, or transmitting. Also indicates full charge of the battery when programmable button is pressed.

**Blinking green** – Radio is receiving a non-privacy-enabled call or data, detecting activity or retrieving Over-the-Air Programming transmissions over the air.

**Double blinking green** – Radio is receiving a privacy-enabled call or data. 

**NOTE:** While in conventional mode, when the LED blinks green, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

## ■ Audio Tones

---

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

**Continuous Tone** A monotone sound. Sounds continuously until termination.



**Periodic Tone** Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.



**Repetitive Tone** A single tone that repeats itself until it is terminated by the user.



**Momentary Tone** Sounds only once for a short period of time defined by the radio.



## ■ Indicator Tones

---

High pitched tone

Low pitched tone



Positive Indicator Tone.



Negative Indicator Tone.

## Making and Receiving Calls

Once you understand how your MOTOTRBO Portable is configured, you are ready to use your radio.

Use this navigation guide to familiarize yourself with the basic call features:

Selecting a Zone . . . . .	page 19
Selecting a Channel . . . . .	page 20
Receiving and Responding to a Radio Call. . . . .	page 20
Making a Radio Call . . . . .	page 25
Stopping a Radio Call . . . . .	page 31
Talkaround . . . . .	page 32
Monitoring Features . . . . .	page 32

## Selecting a Zone

A zone is a group of channels. Your radio supports up to 128 channels and 50 zones, with a maximum of 128 channels per zone.

Use the following procedure to select a zone.

### Procedure:

Press the programmed Zone button and proceed to Step 3.


### OR

Follow the procedure below.

- 1  to access the menu.
- 2  or  to Zone and press  to select.
- 3 The current zone is displayed and indicated by a ✓.
- 4  or  to the required zone and press  to select.
- 5 The display shows <Zone> Selected momentarily and returns to the selected zone screen.

## ■ Selecting a Channel

Transmissions are sent and received on a channel. Depending on your radio's configuration, each channel may have been programmed differently to support different groups of users or supplied with different features. After selecting the relevant Zone, select the relevant channel you require to transmit or receive on.

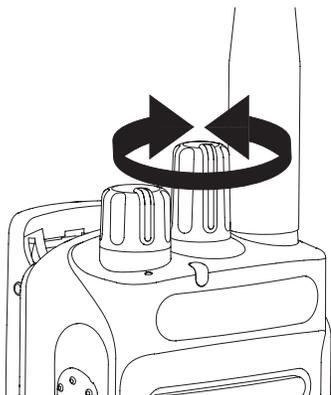


### Procedure:

Once the required zone is displayed (if you have multiple zones in your radio), turn the programmed Channel Selector Knob to select the channel.

## ■ Receiving and Responding to a Radio Call

Once the channel, subscriber ID or group ID is displayed, you can proceed to receive and respond to calls.

*The LED lights up solid green while the radio is transmitting and blinks green when the radio is receiving.*

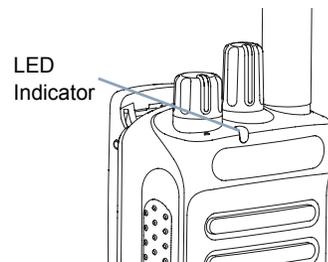

**NOTE:** The LED lights up solid green while the radio is transmitting and double blinks green when the radio is receiving a privacy-enabled call.

To unscramble a privacy-enabled call, your radio must have the same Privacy Key, OR the same Key Value and Key ID (programmed by your dealer), as the transmitting radio (the radio you are receiving the call from).

See **Privacy** on page 55 for more information. 

## Receiving and Responding to a Group Call

To receive a call from a group of users, your radio must be configured as part of that group.

### Procedure:

When you receive a Group Call (while on the Home screen):

- 1 The LED blinks green.
- 2 The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays the group call alias. Your radio unmutes and the incoming call sounds through the radio speaker.
- 3 To respond, hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4  If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.  
Press the **PTT** button to respond to the call.  
**OR**  
 If the Voice Interrupt feature is enabled, press the **PTT** button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

- 5 The LED lights up solid green.
- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.  
**OR**  
 Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.
- 7 Release the **PTT** button to listen.
- 8 If there is no voice activity for a predetermined period of time, the call ends.

See **Making a Group Call** on page 26 for details on making a Group Call.

**NOTE:** If the radio receives a Group Call while not on the Home screen, it remains on its current screen prior to answering the call.

Long press the  button to go to the Home screen to view the caller alias before replying.

## Receiving and Responding to a Private Call

A Private Call is a call from an individual radio to another individual radio.

### Procedure:

When you receive a Private Call:

- 1 Depending on how your radio is programmed:  
The LED lights up solid yellow momentarily. Then, the LED blinks green.  
**OR**  
The LED blinks green.
- 2 The first text line shows private call icon. The second text line displays the private call alias. Your radio unmutes and the incoming call sounds through the radio speaker.
- 3 To respond, hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.  
Press the **PTT** button to respond to the call.  
**OR**  
If the Voice Interrupt feature is enabled, press the **PTT** button to stop the current call from the transmitting radio and free the channel for you to talk/respond.
- 5 The LED lights up solid green.

- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 7 Release the **PTT** button to listen.
- 8 If there is no voice activity for a predetermined period of time, the call ends.
- 9 You hear a short tone. The display shows `Call Ended`.

See **Making a Private Call** on page 26 for details on making a Private Call.

## Receiving an All Call

An All Call is a call from an individual radio to every radio on the channel. It is used to make important announcements requiring the user's full attention.

### Procedure:

When you receive an All Call:

- 1 A tone sounds and the LED blinks green.
- 2 The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays All Call. Your radio unmutes and the incoming call sounds through the radio speaker.
- 3 Once the All Call ends, the radio returns to the previous screen before receiving the call. An all call does not wait for a predetermined period of time before ending.  
 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is now available for use.

*You cannot respond to an All Call.*

See **Making an All Call** on page 27 for details on making an All Call.

**NOTE:** The radio stops receiving the All Call if you switch to a different channel while receiving the call.

During an All Call, you will not be able to use any programmed button functions until the call ends.

## Receiving and Responding to a Selective Call

A Selective Call is a call from an individual radio to another individual radio. It is a Private Call on an analog system.

### Procedure:

When you receive a Selective Call:

- 1 The LED blinks green.
- 2 The Private Call icon appears in the top right corner. The first text line shows the caller alias or Selective Call or Alert with Call. Your radio unmutes and the incoming call sounds through the radio's speaker.
- 3 To respond, hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.  
Press the **PTT** button to respond to the call.
- 5 The LED lights up solid green.

- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 7 Release the **PTT** button to listen.
- 8 If there is no voice activity for a predetermined period of time, the call ends.
- 9 You hear a short tone. The display shows `Call Ended`.

**NOTE:** See *Making a Selective Call on page 28 for details on making a Private Call.*

## Receiving and Responding to a Phone Call

### *Phone Call as Private Call*

#### **Procedure:**

When you receive a Phone Call as a Private Call:

- 1 The Phone Call icon appears in the top right corner. The display shows the caller alias or `Phone Call`.
- 2 Press the **PTT** button to talk and release to listen.
- 3 Press  to end the call.  
The display shows `Ending Phone Call`.

- 4 If successful:  
A tone sounds and the display shows `Call Ended`.  
**OR**  
If unsuccessful:  
Your radio returns to the Phone Call screen. Repeat Step 3 or wait for the telephone user to end the call.

*If Phone Call capability is not enabled in your radio, the display shows `Unavailable` and your radio mutes the call. Your radio returns to the previous screen when the call ends.*

### *Phone Call as Group Call*

#### **Procedure:**

When you receive a Phone Call as a Group Call:

- 1 The Phone Group Call icon appears in the top right corner. The display shows the group alias and `Phone Call`.
- 2 Press the **PTT** button to talk and release to listen.
- 3 Press  to end the call.  
The display shows `Ending Phone Call`.
- 4 If successful:  
A tone sounds and the display shows `Call Ended`.  
**OR**  
If unsuccessful:  
Your radio returns to the Phone Call screen. Repeat Step 3 or wait for the telephone user to end the call.

If Phone Call capability is not enabled in your radio, the display shows *Unavailable* and your radio mutes the call. Your radio returns to the previous screen when the call ends.

### **Phone Call as All Call**

#### **Procedure:**

When you receive a Phone Call as an All Call:

- 1 The Phone Call icon appears in the top right corner. The display shows **All Call** and **Phone Call**.
- 2 Press the **PTT** button to talk and release to listen.
- 3 Press  to end the call.  
The display shows **Ending Phone Call**.
- 4 If successful:  
A tone sounds and the display shows **All Call** and **Call Ended**.  
**OR**  
If unsuccessful:  
Your radio returns to the Phone Call screen. Repeat Step 3 or wait for the telephone user to end the call.

*If Phone Call capability is not enabled in your radio, the display shows **Unavailable** and your radio mutes the call. Your radio returns to the previous screen when the call ends.*

**NOTE:** When you receive a Phone Call as an All Call, you can respond to the call or end the call, only if an All Call type is assigned to the channel.

## ■ Making a Radio Call

You can select a channel, subscriber ID, or group by using:

- The Channel Selector Knob.
- A programmed **One Touch Access** button (see **Making a Phone Call with the One Touch Access Button** on page 30). 
- A programmable button – This method is for Phone Calls only (see **Making a Phone Call with the Programmable Phone Button** on page 30). 
- The Contacts list. (see **Contacts Settings** on page 40)

**NOTE:** Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio will be able to unscramble the transmission.

See **Privacy** on page 55 for more information. 

The One Touch Access feature allows you to make a Group or Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can **ONLY** have one ID assigned to a **One Touch Access** button. Your

radio can have multiple **One Touch Access** buttons programmed.

### **Making a Call with the Channel Selector Knob**

### **Making a Group Call**

To make a call to a group of users, your radio must be configured as part of that group.

#### **Procedure:**

- 1 Select the channel with the active subscriber alias or ID. See **Selecting a Channel** on page 20.  
**OR**  
Press the programmed **One Touch Access** button.
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The first text line shows the group call icon. The second text line shows the group call alias.
- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.  
**OR**  
 Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.
- 5 Release the **PTT** button to listen. When the target radio responds, the LED blinks green. You see the Group Call

icon, the group alias or ID, and transmitting radio alias or ID on your display.

- 6  If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

#### **OR**

If there is no voice activity for a predetermined period of time, the call ends.

- 7 Radio returns to the screen you were on prior to initiating the call.

*You can also make a Group Call via Contacts (see **Making a Group Call from Contacts** on page 40).*

### **Making a Private Call**

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

There are two types of Private Calls. The first type, where a radio presence check is performed prior to setting up the call, while the other sets up the call immediately.

Only **one** of these call types can be programmed to your radio by your dealer.

You hear a negative indicator tone, when you make a Private Call via the Contacts list, Call Log, **One Touch Access** button,

the programmed number keys, or the Channel Selector Knob, if this feature is not enabled.

Use the Call Alert features to contact an individual radio. See **Call Alert Operation** on page 46 for more information.

**Procedure:**

- 1 Select the channel with the active subscriber alias or ID. See **Selecting a Channel** on **page 20**.  
**OR**  
Press the programmed **One Touch Access** button.
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The first text line shows the private call icon. The second text line displays the private call alias.
- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 5 Release the **PTT** button to listen. When the target radio responds, the LED blinks green.

- 6 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

**OR**

If there is no voice activity for a predetermined period of time, the call ends.

- 7 You hear a short tone. The display shows `Call Ended`.

*You can also make a Private Call via Contacts (see **Making a Private Call from Contacts** on page 41).*

 **Making an All Call**

This feature allows you to transmit to all users on the channel. Your radio must be programmed to allow you to use this feature.

**Procedure:**

- 1 Select the channel with the active subscriber alias or ID. See **Selecting a Channel** on **page 20**.
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call. The LED lights up solid green. The first text line shows the `All Call` icon. The second text line displays the `All Call` alias.

- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

**OR**

-  Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.
- 

*Users on the channel cannot respond to an All Call.*

### **Making a Selective Call**

Just like a Private Call, while you can receive and/or respond to a Selective Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Selective Call.

#### **Procedure:**

- 1 Select the channel with the active subscriber alias or ID. See **Selecting a Channel** on **page 20**.

---

- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 3 Press the **PTT** button to make the call. The LED lights up solid green. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status. Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

**OR**

Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.

---

- 4 Release the **PTT** button to listen. When the target radio responds, the LED blinks green.

---

  - 5 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.
- OR**
- If there is no voice activity for a predetermined period of time, the call ends.
- 
- 6 You hear a short tone. The display shows **Call Ended**.

---

## **Making a Phone Call with the One Touch Access Button**

### Procedure:

- 1 Press the programmed **One Touch Access** button to make a Phone Call to the predefined alias or ID.  
If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

---

- 2 The LED lights up solid green. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

---

- 3 If successful:  
You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.  
**OR**  
If unsuccessful:  
A tone sounds and the display shows `Phone Call Failed`. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

---

- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 5 Press the **PTT** button to talk and release to listen.

---

- 6 Press  to end the call.  
**OR**  
Press **One Touch Access** button. If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

---

- 7 The display shows `Ending Phone Call`.

---

- 8 If successful:  
A tone sounds and the display shows `Call Ended`.  
**OR**  
If unsuccessful:  
Your radio returns to the Phone Call screen. Repeat Steps 6 and 7 or wait for the telephone user to end the call.

---

*When the telephone user ends the call, a tone sounds and the display shows `Call Ended`.*

*If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on, prior to initiating the call.*

During channel access, press  to dismiss the call attempt and a tone sounds.

During the call, when you press the One Touch Access button with the deaccess code preconfigured your radio attempts to end the call.

The access or deaccess code cannot be more than 10 characters.

## **Making a Phone Call with the Programmable Phone Button**

### Procedure:

- 1 Press the programmed **Phone** button to enter into the Phone Entry list.

---

- 2  or  to the required subscriber alias or ID, and press  to select.

---

- 3 The LED lights up solid green. The Phone Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.

---

- 4 If successful:  
You hear the dialing tone of the telephone user. The first text line shows the subscriber alias. The Phone Call icon remains in the top right corner.  
**OR**  
If unsuccessful:  
A tone sounds and the display shows `Phone Call Failed`. Your radio returns to the Access Code input screen. If the access code was preconfigured in the Contacts list, the radio returns to the screen you were on prior to initiating the call.

---

- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

6 Press the **PTT** button to talk and release to listen.

---

7 Press  to end the call.

### **OR**

Press **One Touch Access** button. If the entry for the **One Touch Access** button is empty, a negative indicator tone sounds.

---

8 The display shows `Ending Phone Call`.

---

9 If successful:

A tone sounds and the display shows `Call Ended`.

### **OR**

If unsuccessful:

Your radio returns to the Phone Call screen. Repeat Steps 6 and 7 or wait for the telephone user to end the call.

---

*When you press **PTT** button while in the Phone Contacts screen, a tone sounds and the display shows*

*Press OK to Place Call.*

*When the telephone user ends the call, a tone sounds and the display shows `Call Ended`.*

*If the call ends while you are entering the extra digits requested by the Phone Call, your radio returns to the screen you were on prior to initiating the call.*

During channel access, press  to dismiss the call attempt and a tone sounds.

During the call, when you press One Touch Access button with the deaccess code preconfigured your radio attempts to end the call.

The access or de-access code cannot be more than 10 characters.

## ■ Stopping a Radio Call

---

This feature allows you to stop an ongoing Group or Private Call to free the channel for transmission. For example, when a radio experiences a “stuck microphone” condition where the **PTT** button is inadvertently pressed by the user.

Your radio must be programmed to allow you to use this feature.

### **Procedure:**

While on the required channel:

- 1 Press the programmed **Transmit Interrupt Remote Dekey** button.
- 2 The display shows `Remote Dekey`.
- 3 Wait for acknowledgment.
- 4 The radio sounds a positive indicator tone and the display shows `Remote Dekey Success`, indicating that the channel is now free.  
**OR**  
The radio sounds a negative indicator tone and the display shows `Remote Dekey Failed`.

*On the interrupted radio, the display shows `Call Interrupted`, and the radio sounds a negative indicator tone until you release the **PTT** button, if it is transmitting an interruptible call that is stopped via this feature.*

## ■ Talkaround

---

You can continue to communicate when your repeater is not operating, or when your radio is out of the repeater's range but within talking range of other radios.

This is called "talkaround".

### Procedure:

Press the programmed **Repeater/Talkaround** button to toggle between talkaround and repeater modes.

### OR

Follow the procedure below.

- 1  to access the menu.

---

  - 2  or  to Utilities and press  to select.

---

  - 3  or  to Radio Settings and press  to select.

---

  - 4 Press  to enable Talkaround. The display shows ✓ beside Enabled.
- OR**
- Press  to disable Talkaround. The ✓ disappears from beside Enabled.
- 
- 5 The screen automatically returns to the previous menu.

*The Talkaround setting is retained even after powering down.*

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## ■ Monitoring Features

---

### Monitoring a Channel

Use the Monitor feature to make sure a channel is clear before transmitting.

### Procedure:

- 1 Press and hold the programmed **Monitor** button and listen for activity.

---

- 2 The Monitor icon appears on the status bar and the LED lights up solid yellow.

---

- 3 You hear radio activity or total silence, depending on how your radio is programmed.

---

- 4 When you hear "white noise" (that is, the channel is free), press the **PTT** button to talk and release it to listen.

## Permanent Monitor

Use the Permanent Monitor feature to continuously monitor a selected channel for activity.

### Procedure:

- 1 Press the programmed **Permanent Monitor** button.
- 2 Radio sounds an alert tone, the LED lights up solid yellow, and the display shows `Permanent Monitor On`. The Monitor icon appears on the status bar.
- 3 Press the programmed **Permanent Monitor** button to exit Permanent Monitor mode.
- 4 Radio sounds an alert tone, the LED turns off, and display shows `Permanent Monitor Off`.

**NOTE:** Radio users who switch from analog to digital channels often assume that the lack of static on a digital channel is an indication that the radio is not working properly. This is not the case. Digital technology quiets the transmission by removing the noise from the signal and allowing only the clear voice or data information to be heard.

## Advanced Features

Use the navigation guide to learn more about advanced features available with your radio:

Radio Check . . . . .	page 34
Scan Lists . . . . .	page 35
Scan . . . . .	page 37
Vote Scan . . . . .	page 39
Contacts Settings . . . . .	page 40
Call Indicator Settings . . . . .	page 42
Call Log Features . . . . .	page 45
Call Alert Operation . . . . .	page 46
Emergency Operation . . . . .	page 48
Analog Status Update . . . . .	page 54
Privacy . . . . .	page 55
Security . . . . .	page 56
Lone Worker . . . . .	page 58
Password Lock Features . . . . .	page 58
Notification List . . . . .	page 60
Auto-Range Transponder System (ARTS) . . . . .	page 61
Over-the-Air Programming (OTAP) . . . . .	page 62
Utilities . . . . .	page 62
Front Panel Programming (FPP) . . . . .	page 74

## Radio Check

If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

This feature is only applicable for subscriber aliases or IDs.

### Sending a Radio Check

#### Procedure:

Use the programmed **Radio Check** button.

- 1 Press the programmed **Radio Check** button.
- 2  or  to the required subscriber alias or ID and press  to select.
- 3 The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.
- 4 Wait for acknowledgement.
- 5 If successful, a positive indicator tone sounds and the display shows positive mini notice.  
**OR**  
If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.
- 6 Radio returns to the subscriber alias or ID screen.

OR

**Procedure:**

Use the menu.

- 1  to access the menu.

---

- 2  or  to **Contacts** and press  to select.

---

- 3  or  to the required subscriber alias or ID and press  to select.

---

- 4  or  to **Radio Check** and press  to select.

---

- 5 The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.

---

- 6 Wait for acknowledgement.

---

- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice.  
**OR**  
If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

---

- 8 Radio returns to the subscriber alias or ID screen.

*If the  button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.*

## ■ Scan Lists

---

Scan lists are created and assigned to individual channels/groups. Your radio scans for voice activity by cycling through the channel/group sequence specified in the scan list for the current channel/group.

Your radio can support up to 250 scan lists, with a maximum of 16 members in a list. Each scan list supports a mixture of both analog and digital entries.

You can add, delete, or prioritize channels by editing a scan list.

You can attach a new scan list to your radio via Front Panel Programming.

### Viewing an Entry in the Scan List

**Procedure:**

- 1  to access the menu.

---

- 2  or  to **Scan** and press  to select.

---

- 3  or  to **Scan List** and press  to select.

---

- 4 Use  or  to view each member on the list.

The priority icon appears left of the member's alias, if set, to indicate whether the member is on a Priority 1 or Priority 2 channel list. You **cannot** have multiple Priority 1 or Priority 2 channels in a scan list.

There is no priority icon if priority is set to **None**.

## Editing the Scan List

### Adding a New Entry to the Scan List

#### Procedure:

- 1  to access the menu.

---

- 2  or  to Scan and press  to select.

---

- 3  or  to Scan List and press  to select.

---

- 4  or  to Add Member and press  to select.

---

- 5  or  to the required alias or ID.

---

- 6  or  to the required priority level and press  to select.

---

- 7 The display shows positive mini notice, followed immediately by Add Another?.

---

- 8  or  to Yes and press  to select, to add another entry, and repeat Steps 5 to 8.

**OR**

-  or  to No and press  to select to save the current list.
- 

### Deleting an Entry from the Scan List

#### Procedure:

- 1  to access the menu.

---

  - 2  or  to Scan and press  to select.

---

  - 3  or  to Scan List and press  to select.

---

  - 4  or  to the required alias or ID.

---

  - 5 Press  to select.

---

  - 6  or  to Delete and press  to select.

---

  - 7 At Delete Entry?,  or  to Yes and press  to select, to delete the entry. The display shows positive mini notice.
- OR**
-  or  to No and press  to select to return to the previous screen.
-

- Repeat Steps 4 to 9 to delete other entries.

After deleting all required aliases or IDs, long press  to return to the Home screen.

### **Setting and Editing Priority for an Entry in the Scan List**

#### **Procedure:**

-  to access the menu.
-  or  to Scan and press  to select.
-  or  to Scan List and press  to select.
-  or  to the required alias or ID.
- Press  to select.
-  or  to Edit Priority and press  to select.
-  or  to the required priority level and press  to select.
- The display shows positive mini notice before returning to the previous screen.
- The priority icon appears left of the member's name.

There is no priority icon if priority is set to **None**.

## ■ Scan

When you start a scan, your radio cycles through the programmed scan list for the current channel looking for voice activity.

The LED blinks yellow and the scan icon appears on the status bar.

During a dual mode scan, if you are on a digital channel, and your radio locks onto an analog channel, it automatically switches from digital mode to analog mode for the duration of the call. This is also true for the reverse.

There are two ways of initiating scan:

- **Main Channel Scan (Manual):** Your radio scans all the channels/groups in your scan list. On entering scan, your radio may – depending on the settings – automatically start on the last scanned “active” channel/group or on the channel where scan was initiated.
- **Auto Scan (Automatic):** Your radio automatically starts scanning when you select a channel/group that has Auto Scan enabled.

## Starting and Stopping Scan

### Procedure:

Press the programmed **Scan** button to start or stop Scan.

### OR

Follow the procedure below.

- 1 Use the Channel Selector Knob to select a channel programmed with a scan list.

---

  - 2  to access the menu.

---

  - 3  or  to **Scan** and press  to select.

---

  - 4  or  to **Scan State** and press  to select.

---

  - 5  or  to required scan state and press  to select.

---

  - 6 The display shows **Scan On** when scan is enabled. The LED blinks yellow and the scan icon appears.
- OR**
- The display shows **Scan Off** if scan is disabled. The LED turns off and the scan icon disappears.

*While scanning, the radio will only accept data (e.g. location, or PC data) if received on its Selected Channel.*

## Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. The radio stays on that channel for a programmed time period known as “hang time”.

### Procedure:

- 1 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
    -  If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is free for you to respond.

---

  - 2 Press the **PTT** button during hang time. The LED lights up solid green.

---

  - 3 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- OR**
-  Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.

---

  - 4 Release the **PTT** button to listen.

---

  - 5 If you do not respond within the hang time, the radio returns to scanning other channels/groups.

## Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a “nuisance” channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to the channel designated as the Selected Channel.

### Procedure:

- 1 When your radio “locks on to” an unwanted or nuisance channel, press the programmed **Nuisance Channel Delete** button until you hear a tone.
- 2 Release the **Nuisance Channel Delete** button. The nuisance channel is deleted.

*Deleting a “nuisance” channel is **only** possible through the programmed **Nuisance Channel Delete** button. This feature is **not** accessible through the menu.*

## Restoring a Nuisance Channel

### Procedure:

To restore the deleted nuisance channel, do **one** of the following:

- Turn the radio off and then power it on again, **OR**
- Stop and restart a scan via the programmed **Scan** button or menu, **OR**
- Change the channel via the Channel Selector Knob.

## Vote Scan

Vote Scan provides you with wide area coverage in areas where there are multiple base stations transmitting identical information on different analog channels.

Your radio scans analog channels of multiple base stations and performs a voting process to select the strongest received signal. Once that is established, your radio unmutes to transmissions from that base station.

The LED blinks yellow and the vote scan icon appears on the status bar.

*To respond to a transmission during a Vote Scan, follow the same procedures as Responding to a Transmission During a Scan on page 38.*

## ■ Contacts Settings

Contacts provides “address-book” capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each entry, depending on context, associates with **one** of five types of calls: Group Call, Private Call, All Call, PC Call or Dispatch Call.

PC Call and Dispatch Call are data-related. They are only available with the applications. Refer to the data applications documentation for more information.

**NOTE:** If the Privacy feature is enabled on a channel, you can make privacy-enabled Group Call, Private Call, and All Call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio will be able to unscramble the transmission.

See **Privacy** on page 55 for more information. 

Your radio supports two Contacts lists, one for Analog contacts and one for Digital contacts, with a maximum of 500 members for each Contacts list.

Each entry within Contacts displays the following information:

- Call Type
- Call Alias
- Call ID

**NOTE:** You can add, or edit subscriber IDs for the Digital Contacts list. Deleting subscriber IDs can only be performed by your dealer.

For the Analog Contacts list, you can only view the subscriber IDs, edit the subscriber IDs, and initiate a Call Alert. Adding and deleting capabilities can only be performed by your dealer.

### Making a Group Call from Contacts

#### Procedure:

- 1  to access the menu.

---

- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.

---

- 3  or  to the required group alias or ID.

---

- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

- 5 Press the **PTT** button to make the call. The LED lights up solid green.

---

- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.  
**OR**  
 Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.

---

7 Release the **PTT** button to listen. When any user in the group responds, the LED blinks green. You see the Group Call icon, the group ID, and that user's ID on your display.

8  If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

**OR**

If there is no voice activity for a programmed period of time, the call ends.

### Making a Private Call from Contacts

#### Procedure:

- 1  to access the menu.
- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.
- 3  or  to the required subscriber alias or ID.
- 4 Press  to select.
- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 6 Press the **PTT** button to make the call. The LED lights up solid green. The display shows the destination alias.

7 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

8 Release the **PTT** button to listen. When the target radio responds, the LED blinks green and the display shows the transmitting user's ID.

9 If the Channel Free Indication feature is enabled, you will hear a short alert tone the moment the target radio releases the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

**OR**

If there is no voice activity for a programmed period of time, the call ends.

10 You hear a short tone. The display shows **Call Ended**.

## Setting Default Contact

### Procedure:

Follow the procedure below.

- 1  to access the menu.

---

- 2  or  to `Contacts` and press  to select.

---

- 3  or  to the required alias or ID and press  to select.

---

- 4  or  to `Set as Default` and press  to select.

---

- 5 The radio sounds a positive indicator tone and the display shows positive mini notice.

---

- 6 A ✓ appears beside the selected default alias or ID.

---

## Call Indicator Settings

### Activating and Deactivating Call Ringers for Call Alert

You can select, or turn on or off ringing tones for a received Call Alert.

### Procedure:

- 1  to access the menu.

---

- 2  or  to `Utilities` and press  to select.

---

- 3  or  to `Radio Settings` and press  to select.

---

- 4  or  to `Tones/Alerts` and press  to select.

---

- 5  or  to `Call Ringers` and press  to select.

---

- 6  or  to `Call Alert` and press  to select. The current tone is indicated by a ✓.

---

- 7  or  to the required tone and press  to select. ✓ appears beside selected tone.

---

**NOTE:** At Step 6, you can also use  or  to change the selected option.

## Activating and Deactivating Call Ringers for Private Calls

You can turn on or off the ringing tones for a received Private Call.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Tones/Alerts and press  to select.
- 5  or  to Call Ringers and press  to select.
- 6  or  to Private Call.
- 7 Press  to enable Private Call ringing tones. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Private Call ringing tones. The ✓ disappears from beside Enabled.

**NOTE:** At Step 6, you can also use  or  to change the selected option.

## Activating and Deactivating Call Ringers for Selective Call

You can select, or turn on or off ringing tones for a received Selective Call.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Tones/Alerts and press  to select.
- 5  or  to Call Ringers and press  to select.
- 6  or  to Selective Call and press  to select.  
The current tone is indicated by a ✓.
- 7  or  to the required tone and press  to select. ✓ appears beside selected tone.

**NOTE:** At Step 6, you can also use  or  to change the selected option.

## Assigning Ring Styles

You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert from a particular contact.

### Procedure:

- 1  to access the menu.

---

- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.

---

- 3  or  to the required alias or ID and press  to select.

---

- 4  or  to **Edit** and press  to select.

---

- 5 Press  until display shows **Edit Ringtone** menu.

---

- 6 A ✓ indicates the current selected tone.

---

- 7  or  to the required tone and press  to select. ✓ appears beside selected tone.

---

- 8 The display shows a positive mini notice.

*The radio sounds out each ring style as you navigate through the list.*

## Escalating Alarm Tone Volume

You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

### Procedure:

- 1  to access the menu.

---

- 2  or  to **Utilities** and press  to select.

---

- 3  or  to **Radio Settings** and press  to select.

---

- 4  or  to **Tones/Alerts** and press  to select.

---

- 5  or  to **Escalert**.

---

- 6 Press  to enable Escalert. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Escalert. The ✓ disappears from beside Enabled.

**NOTE:** At Step 5, you can also use  or  to change the selected option.

## ■ Call Log Features

Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:

- Delete
- View Details

### Viewing Recent Calls

The lists are *Missed*, *Answered*, and *Outgoing*.

#### Procedure:

- 1  to access the menu.
- 2  or  to *Call Log* and press  to select.
- 3  or  to required list and press  to select.
- 4 The display shows the most recent entry at the top of the list.
- 5  or  to view the list.

Press the **PTT** button to start a *Private Call* with the current selected alias or ID.

### Deleting a Call from a Call List

#### Procedure:

- 1  to access the menu.
- 2  or  to *Call Log* and press  to select.
- 3  or  to the required list and press  to select.
- 4  or  to the required alias or ID and press  to select.
- 5  or  to *Delete* and press  to select.
- 6 Press  to select *Yes* to delete the entry. The display shows positive mini notice.  
**OR**  
 or  to *No* to return to the previous screen.

When you select a call list and it contains no entries, the display shows *List Empty*.

## Viewing Details from a Call List

### Procedure:

- 1  to access the menu.

---

- 2  or  to Call Log and press  to select.

---

- 3  or  to the required list and press  to select.

---

- 4  or  to the required alias or ID and press  to select.

---

- 5  or  to View Details and press  to select.  
Display shows details.

---

## ■ Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.

This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via Contacts.

### Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.

#### Procedure:

- 1 You hear a repetitive tone. The LED blinks yellow.

---

- 2 Press the **PTT** button while the display still shows the Call Alert in the Notification List to respond with a Private Call.  
**OR**  
Press  to exit the Notification List. The alert is moved to the Missed Call Log.

---

See **Notification List** on page 60 for details about the Notification List.

See **Call Log Features** on page 45 for details about the Missed Call List.

## Making a Call Alert from the Contacts List

### Procedure:

- 1  to access the menu.
- 2  or  to **Contacts** and press  to select.
- 3  or  to the required subscriber alias or ID and press  to select.
- 4  or  to **Call Alert** and press  to select.
- 5 The display shows **Call Alert** and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 6 The LED lights up solid green when your radio is sending the Call Alert.
- 7 If the Call Alert acknowledgement is received, the display shows positive mini notice.  
**OR**  
If the Call Alert acknowledgement is not received, the display shows negative mini notice.

## Making a Call Alert with the One Touch Access Button

### Procedure:

- 1 Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias or ID.
- 2 The display shows **Call Alert** and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 3 The LED lights up solid green when your radio is sending the Call Alert.
- 4 If the Call Alert acknowledgement is received, the display shows positive mini notice.  
**OR**  
If the Call Alert acknowledgement is not received, the display shows negative mini notice.

## ■ Emergency Operation

---

An Emergency Alarm is used to indicate a critical situation. You are able to initiate an Emergency at any time on any screen display even when there is activity on the current channel.

Your dealer can set the duration of a button press for the programmed **Emergency** button, except for long press, which is similar with all other buttons:

- Short press – Between 0.05 seconds and 0.75 seconds
- Long press – Between 1.00 second and 3.75 seconds

The programmed **Emergency** button is assigned with the Emergency On/Off feature. Check with your dealer for the assigned operation of the **Emergency** button.

*If short press the programmed **Emergency** button is assigned to turn on the Emergency mode, then long press the programmed **Emergency** button is assigned to exit the Emergency mode.*

*If long press the programmed **Emergency** button is assigned to turn on the Emergency mode, then short press the programmed **Emergency** button is assigned to exit the Emergency mode.*

**NOTE:** Side Button 1 or Side Button 2 can be programmed as the **Emergency Button**.

Your radio supports **three** Emergency Alarms:

- Emergency Alarm
- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow 

In addition, each alarm has the following types:

- **Regular** – Radio transmits an alarm signal and shows audio and/or visual indicators.
- **Silent** – Radio transmits an alarm signal without any audio or visual indicators. Radio receives calls without any sound through the radio's speaker, until you press the **PTT** button to initiate the call.
- **Silent with Voice** – Radio transmits an alarm signal without any audio or visual indicators, but allow incoming calls to sound through the radio's speaker.

Only **ONE** of the Emergency Alarms above can be assigned to the programmed **Emergency** button.

## Sending an Emergency Alarm

This feature allows you to send an Emergency Alarm, a non-voice signal, which triggers an alert indication on a group of radios.

### Procedure:

- 1 Press the programmed **Emergency On** button.
- 2 The display shows **Tx Alarm** and the destination alias. The LED lights up solid green and the Emergency icon appears.  
**OR**  
 The display shows **Tx Telegram** and the destination alias. The LED lights up solid green and the Emergency icon appears.
- 3 When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the LED blinks green. The display shows **Alarm Sent**.  
**OR**  
If your radio does not receive an Emergency Alarm acknowledgement, and after all retries have been exhausted, a tone sounds and the display shows **Alarm Failed**.
- 4 Radio exits the Emergency Alarm mode and returns to the Home screen.

*If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode.*

## Sending an Emergency Alarm with Call

This feature allows you to send an Emergency Alarm to a group of radios. Upon acknowledgement by a radio within the group, the group of radios can communicate over a programmed Emergency channel.

### Procedure:

- 1 Press the programmed **Emergency On** button.
- 2 The display shows **Tx Alarm** and the destination alias. The LED lights up solid green and the Emergency icon appears.  
**OR**  
 The display shows **Tx Telegram** and the destination alias. The LED lights up solid green and the Emergency icon appears.
- 3 When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the LED blinks green. The display shows **Alarm Sent**.
- 4 Your radio enters the emergency call mode when the display shows **Emergency** and the destination group alias.
- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 6 Press **PTT** button to make the call. The LED lights up solid green and the group icon appears on the display.

- 7 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

**OR**

 Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.

- 8 Release the **PTT** button to listen.  
When you receive a group call, the display shows the caller alias and group alias.

- 9 When the channel is free for you to respond, a short alert tone sounds (  if the Channel Free Indication feature is enabled). Press the **PTT** button to respond.

**OR**

Once your call ends, press the programmed **Emergency Off** button to exit the Emergency mode.

- 10 The radio returns to the Home screen.

*If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until you press the **PTT** button to initiate the call.*

*If your radio is set to Silent with Voice, it will not display any audio or visual indicators during Emergency mode, but allow incoming calls to sound through the radio's speaker. The indicators will only appear once you press the **PTT** button to initiate, or respond to, the call.*

## Sending an Emergency Alarm with Voice to Follow

This feature allows you to send an Emergency Alarm to a group of radios. Your radio's microphone is automatically activated, allowing you to communicate with the group of radios without pressing the **PTT** button.

This activated microphone state is also known as "hot mic".

If your radio has Emergency Cycle Mode enabled, repetitions of hot mic and receiving period are made for a programmed duration.

**NOTE:** During Emergency Cycle Mode, received calls sound through the radio's speaker.

If you press the **PTT** button during the programmed hot mic transmission or programmed receiving period, regardless whether Emergency Cycle Mode is enabled or disabled, you will hear a prohibit tone, indicating that you should release the **PTT** button. The radio ignores the **PTT** press and remains in Emergency mode.

**NOTE:** If you press the **PTT** button during hot mic, and continue to press it after the hot mic duration expires, the radio continues to transmit until you release the **PTT** button.

**Procedure:**

- 1 Press the programmed **Emergency On** button.
- 2 The display shows Tx Alarm and the destination alias. The LED lights up solid green and the Emergency icon appears.  
**OR**  
 The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- 3 Once the display shows Alarm Sent, speak clearly into the microphone. When hot mic has been enabled, the radio automatically transmits without a **PTT** press until the hot mic duration expires. While transmitting, the LED lights up solid green and the Emergency icon appears.
- 4 The radio automatically stops transmitting when: Once the cycling duration between hot mic and receiving calls expires, if Emergency Cycle Mode is enabled.  
**OR**  
Once the hot mic duration expires, if Emergency Cycle Mode is disabled.
- 5 To transmit again, press the **PTT** button.  
**OR**  
Press the programmed **Emergency Off** button to exit the Emergency mode.
- 6 The radio returns to the Home screen.

*If your radio is set to Silent, it will not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until the programmed hot mic transmission period is over, and you press the **PTT** button.*

*If your radio is set to Silent with Voice, it will not display any audio or visual indicators during Emergency mode when you are making the call with hot mic, but allow sound through the radio's speaker when the target radio responds after the programmed hot mic transmission period is over. The indicators will only appear when you press the **PTT** button.*

**NOTE:** If the Emergency Alarm request fails, the radio does not retry to send the request, and enters the hot mic state directly.

 **Reinitiating an Emergency Mode**

**NOTE:** This feature is only applicable to the radio sending the Emergency Alarm.

There are two instances where this can happen:

- You change the channel while the radio is in Emergency mode. This exits the Emergency mode. If Emergency Alarm is enabled on this new channel, the radio reinitiates Emergency.
- You press the programmed **Emergency On** button during an Emergency initiation/transmission state. This causes the radio to exit this state, and to reinitiate Emergency.

## Exiting Emergency Mode

**NOTE:** This feature is only applicable to the radio sending the Emergency Alarm.

Your radio exits Emergency mode when **one** of the following occurs:

- Emergency Alarm acknowledgement is received (for **Emergency Alarm** only), **OR**
-  An Emergency Exit Telegram is received, **OR**
- All retries to send the alarm have been exhausted, **OR**
- The **Emergency Off** button is pressed, **OR**
- Turn the radio off and then power it on again if your radio has been programmed to remain on the Emergency Revert channel even after acknowledgement is received.

**NOTE:** If your radio is powered off, it exits the Emergency mode. The radio will not reinitiate the Emergency mode automatically when it is turned on again.

If you change channels when your radio is in Emergency mode to a channel that has no emergency system configured, No Emergency is shown on your display.

## ■ Analog Message Encode

---

Your radio is able to send preprogrammed messages from the Message list to a radio alias or to the dispatcher.

### Sending MDC Message Encode to Dispatcher

#### Procedure:

- 1  or  to Message and press  to select.
  - 2  or  to Quick Text and press  to select.
  - 3  or  to the required message. Press  to send.
  - 4 The display shows transitional mini notice, confirming your message is being sent.
  - 5 If the message is sent, a tone sounds and the display shows positive mini notice.  
OR  
If the message is not sent, a low tone sounds and the display shows negative mini notice.
- 

### Sending 5-Tone Message Encode to Contact

#### Procedure:

- 1  or  to Message and press  to select.
  - 2  or  to Quick Text and press  to select.
  - 3  or  to the required message. Press  to select.
  - 4  or  to the required contact. Press  to select.
  - 5 The display shows transitional mini notice, confirming your message is being sent.
  - 6 If the message is sent, a tone sounds and the display shows positive mini notice.  
**OR**  
If the message is not sent, a low tone sounds and the display shows negative mini notice.
-

## ■ Analog Status Update

Your radio is able to send preprogrammed messages from the Status List indicating your current activity to a radio contact (for 5-Tone systems) or to the dispatcher (for MDC systems).

The last acknowledged message is kept at the top of the Status List. The other messages are arranged in alphanumeric order.

### Sending Status Update to Predefined Contact

#### Procedure:

- 1  or  to Status and press  to select.
- 2  or  to the required status. Press  to select.
- 3  or  to Set as Default. Press  to send the status update.
- 4 The display shows transitional mini notice, confirming your status update is being sent.
- 5 If the status update is acknowledged, a tone sounds and the display shows positive mini notice. A ✓ appears beside the acknowledged status.

#### OR

If the status update is not acknowledged, a low tone sounds and the display shows negative mini notice. A ✓ remains beside the previous status.

For 5-Tone systems, see **Setting Default Contact** on page 42 for details on setting the default contact.

For 5-Tone systems, a **PTT** button press while in the status list sends the selected status update and returns to the Home screen to initiate a voice call.

### Viewing a 5-Tone Status Details

#### Procedure:

- 1  or  to Status and press  to select.
- 2  or  to the required status. Press  to select.
- 3  or  to View Details. Press  to select.
- 4 The display shows details of the selected status.

**NOTE:** A Software License Key sold separately is required to use this feature.

## ■ Privacy

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the channel to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacy-enabled channel, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports two types of privacy:

- Basic Privacy.
- Enhanced Privacy. (A Software License Key sold separately is required for this feature).

Only **ONE** of the privacy types above can be assigned to the radio.

To unscramble a privacy-enabled call or data transmission, your radio must be programmed to have the same Privacy Key (for Basic Privacy), OR the same Key Value and Key ID (for Enhanced Privacy) as the transmitting radio.

If your radio receives a scrambled call that is of a different Privacy Key, OR a different Key Value and Key ID, you will either hear a garbled transmission (Basic Privacy) or nothing at all (Enhanced Privacy).

The LED lights up solid green while the radio is transmitting and double blinks green when the radio is receiving an ongoing privacy-enabled transmission.

Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

### **Procedure:**

Press the programmed **Privacy** button to toggle privacy on or off.

### **OR**

Follow the procedure below.

- 1  to access the menu.

---

  - 2  or  to **Utilities** and press  to select.

---

  - 3  or  to **Radio Settings** and press  to select.

---

  - 4  or  to **Privacy**.

---

  - 5 Press  to enable Privacy. The display shows ✓ beside Enabled.
- OR**
- Press  to disable Privacy. The ✓ disappears from beside Enabled.
- 

*If the radio has a privacy type assigned, secure or unsecure icon appears on the status bar, except when the radio is sending or receiving an Emergency call or alarm.*

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## ■ Security

You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

**NOTE:** Performing Radio Disable and Enable is limited to radios with these functions enabled. Check with your dealer or system administrator for more information.

### Radio Disable

#### **Procedure:**

Use the programmed **Radio Disable** button.

- 1 Press the programmed **Radio Disable** button.
- 2  or  to the required alias or ID and press  to select.
- 3 The display shows transitional mini notice, indicating the request is in progress. The LED blinks green.
- 4 Wait for acknowledgment.

- 5 If successful, a positive indicator tone sounds and the display shows positive mini notice.

**OR**

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

**OR**

#### **Procedure:**

Use the menu.

- 1  to access the menu.
- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.
- 3  or  to the required alias or ID and press  to select.  
 or  to **Radio Disable** and press  to select.
- 4 The display shows transitional mini notice, indicating the request is in progress. The LED blinks green.
- 5 Wait for acknowledgment.
- 6 If successful, a positive indicator tone sounds and the display shows positive mini notice.  
**OR**  
If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Do not press  during the Radio Disable operation as you will not get an acknowledgement message.

## Radio Enable

### Procedure:

Use the programmed **Radio Enable** button.

- 1 Press the programmed **Radio Enable** button.
- 2  or  to the required alias or ID and press  to select.
- 3 The display shows **Radio Enable** and the subscriber alias or ID. The LED lights up solid green.
- 4 Wait for acknowledgment.
- 5 If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.  
**OR**  
If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

**OR**

### Procedure:

Use the menu.

- 1  to access the menu.
- 2  or  to **Contacts** and press  to select. The entries are alphabetically sorted.
- 3  or  to the required alias or ID and press  to select.
- 4  or  to **Radio Enable** and press  to select. The LED blinks green.
- 5 The display shows **Radio Enable** and the subscriber alias or ID. The LED lights up solid green.
- 6 Wait for acknowledgment.
- 7 If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.  
**OR**  
If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press  during the Radio Enable operation as you will not get an acknowledgement message.

## ■ Lone Worker

---

This feature prompts an emergency to be raised if there is no user activity, such as any radio button press or activation of the channel selector, for a predefined time.

Following no user activity for a programmed duration, the radio pre-warns the user via an audio indicator once the inactivity timer expires.

If there is still no acknowledgment by the user before the predefined reminder timer expires, the radio initiates an Emergency Alarm.

Only **one** of the following Emergency Alarms is assigned to this feature:

- Emergency Alarm
- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow 

The radio remains in the emergency state allowing voice messages to proceed until action is taken. See **Emergency Operation** on page 48 on ways to exit Emergency.

**NOTE:** This feature is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

## ■ Password Lock Features

---

If enabled, this feature allows you to access your radio via password upon powering up.

### Accessing the Radio from Password

#### **Procedure:**

Power up the radio.

- 1 You will be prompted to enter a four-digit password.
- 2 Enter your current four-digit password. Press  or  to choose each digit's numeric value (0-9). Press  or  to move to next digit. Each digit changes to ●. Press  to confirm your selection.

You hear a positive indicator tone for every digit pressed. Press  to remove the each ● on the display.

- 3 If the password is correct:  
Your radio proceeds to power up. See **Powering Up the Radio** on page 5.  
**OR**  
If the password is incorrect:  
The display shows `Wrong Password`. Repeat Step 2.  
**OR**  
After the third incorrect password, the display shows

Wrong Password and then, shows Radio Locked. A tone sounds and the LED double blinks yellow.

---

Your radio enters into locked state for 15 minutes, and responds to inputs from **On/Off/Volume Control Knob** and programmed **Backlight Auto** button only.

**NOTE:** The radio is unable to receive any call, including emergency calls, in locked state.

### Unlocking the Radio from Locked State

#### Procedure:

Wait for 15 minutes. Repeat Steps 1 to 3 in **Accessing the Radio from Password** on page 58.

#### OR

Power up the radio, if you have powered down the radio during locked state:

- 1 A tone sounds and the LED double blinks yellow. The display shows Radio Locked.
  - 2 Wait for 15 minutes. Repeat **Accessing the Radio from Password** on page 58.
- 

Your radio restarts the 15 minutes timer for locked state when you power up.

### Turning the Password Lock On or Off

#### Procedure:

- 1  to access the menu.
  - 2  or  to Utilities and press  to select.
  - 3  or  to Radio Settings and press  to select.
  - 4  or  to Passwd Lock and press  to select.
  - 5 Enter your current four-digit password.  
See Step 2 in **Accessing the Radio from Password** on **page 58**.
  - 6 If the password is correct:  
Press  to enable Password Lock. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Password Lock. The ✓ disappears from beside Enabled.  
**OR**  
If the password is incorrect:  
The display shows Wrong Password and automatically returns to the previous menu.
- 

**NOTE:** At Step 6, you can also use  or  to change the selected option.

## Changing the Password

### Procedure:

- 1  to access the menu.

---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Passwd Lock and press  to select.

---

- 5 Enter your current four-digit password.  
See Step 2 in **Accessing the Radio from Password** on page 58.

---

- 6 If the password is correct:  
 or  to Change Pwd and press  to select.  
**OR**  
If the password is incorrect:  
The display shows Wrong Password and automatically returns to the previous menu.

---

- 7 Enter a new four-digit password. See Step 2 in **Accessing the Radio from Password** on **page 58**.

---

- 8 Re-enter the new four-digit password. See Step 2 in **Accessing the Radio from Password** on **page 58**.

---

- 9 If both of the new password inputs match:  
The display shows Password Changed.  
**OR**  
If both of the new password inputs do not match:  
The display shows Passwords Do Not Match.

- 10 The screen automatically returns to the previous menu.

## ■ Notification List

Your radio has a Notification List that collects all your “unread” events on the channel, such as missed calls, and call alerts.

The Notification icon appears on the status bar when the Notification List has one or more events.

The list supports a maximum of forty (40) unread events. When it is full, the next event automatically replaces the oldest event.

After the events are read, they are removed from the Notification List.

## Accessing the Notification List

Press the programmed **Notifications** button.

**OR**

Follow the procedure below.

- 1  to access the menu.
- 2  or  to **Notification** and press  to select.
- 3  or  to the required event and press  to select.

Long press  to return to the Home screen.

## ■ Auto-Range Transponder System (ARTS)

---

ARTS is an analog-only feature designed to inform you when your radio is out-of-range of other ARTS-equipped radios.

ARTS-equipped radios transmit or receive signals periodically to confirm that they are within range of each other. Your dealer can program your radio to transmit or receive the ARTS signal.

Your radio provides indications of states as follows:

- **First-Time Alert** – A tone sounds and the display shows **In Range** after the channel alias.
- **ARTS-in-Range Alert** – A tone sounds, if programmed, and the display shows **In Range** after the channel alias.
- **ARTS-Out-of-Range Alert** – A tone sounds, the LED rapidly blinks red, and the display alternates between **Out of Range** and the home screen.

## ■ Over-the-Air Programming (OTAP)

Your radio can be updated by your dealer remotely, via OTAP, without needing to be physically connected. Additionally, some settings can also be configured via OTAP.

While undergoing OTAP, the LED blinks green.

**NOTE:** When the radio is receiving high volume data, the High Volume Data icon appears and channel is busy. A PTT button press at this time may cause a negative tone to sound.

Once the programming is complete, depending on your radio's configuration:

- A tone sounds, the display shows `Updating Restarting`, and your radio restarts (powers off and on again).
- Select between `Restart Now` or `Postpone`. Selecting `Postpone` allows your radio to return to the previous display, with an OTAP Timer icon visible, for a period of time before the automatic restart occurs.

Upon power up after the automatic restart occurs, the display shows `Sw Update Completed` if the OTAP update is successful or `Sw Update Failed` if the OTAP update is unsuccessful.

See **Software Update** on page 73 for your updated software version.

## ■ Utilities

### Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

#### **Procedure:**

Press the programmed **All Tones/Alerts** button to toggle all tones on or off.

#### **OR**

Follow the procedure below.

- 1  to access the menu.
  - 2  or  to `Utilities` and press  to select.
  - 3  or  to `Radio Settings` and press  to select.
  - 4  or  to `Tones/Alerts` and press  to select.
  - 5  or  to `All Tones` and press  to select.
  - 6 Press  to enable all tones. The display shows ✓ beside `Enabled`.
- OR**
- Press  to disable all tones. The ✓ disappears from beside `Enabled`.

**NOTE:** At Step 5, you can also use  or  to change the selected option.

### **Setting the Tone Alert Volume Offset Level**

You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/alerts, allowing it to be higher or lower than the voice volume.

#### **Procedure:**

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Tones/Alerts and press  to select.

---
- 5  or  to Vol. Offset and press  to select.

---
- 6  or  to the required volume value. The radio sounds a feedback tone with each corresponding volume value.

---
- 7 Press  to keep the required displayed volume value.  
**OR**  
Repeat Step 6 to select another volume value.  
**OR**  
 to exit without changing the current volume offset settings.

---

### **Turning the Talk Permit Tone On or Off**

You can enable and disable the Talk Permit Tone if needed.

#### **Procedure:**

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Tones/Alerts and press  to select.

---
- 5  or  to Talk Permit and press  to select.

---
- 6 Press  to enable Talk Permit Tone. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Talk Permit Tone. The ✓ disappears from beside Enabled.

---

**NOTE:** At Step 5, you can also use  or  to change the selected option.

## Turning the Power Up Tone On or Off

You can enable and disable the Power Up Tone if needed.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Tones/Alerts and press  to select.
- 5  or  to Power Up and press  to select.
- 6 Press  to enable Power Up Tone. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Power Up Tone. The ✓ disappears from beside Enabled.

At Step 5, you can also use  or  to change the selected option.

## Setting the Power Level

You can customize your radio's power setting to high or low for each channel.

**Settings:** High enables communication with radios located at a considerable distance from you. Low enables communication with radios in closer proximity.

### Procedure:

Press the programmed **Power Level** button to toggle transmit power level between high and low.

### OR

Follow the procedure below.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Power and press  to select.
- 5  or  to the required setting and press  to select. ✓ appears beside selected setting.
- 6 Screen returns to the previous menu.

Long press  to return to the Home screen. The power level icon is visible.

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## Adjusting the Display Brightness

You can adjust radio's display brightness as needed.

### **Procedure:**

Press the programmed **Brightness** button and proceed to Step 5.

### **OR**

Follow the procedure below.

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Brightness and press  to select.

---
- 5 The display shows a progress bar. Decrease display brightness by pressing  or increase the display brightness by pressing . Press  to confirm your entry.

---

## Controlling the Display Backlight

You can enable or disable the radio's display backlight as needed. The setting also affects the Menu Navigation Buttons.

### **Procedure:**

Press the programmed **Backlight Auto** button to toggle the backlight settings.

### **OR**

Follow the procedure below.

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Backlight Auto.

---
- 5 Press  to enable backlight. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable backlight. The ✓ disappears from beside Enabled.

---

*The display backlight are automatically turned off if the LED indicator is disabled (see **Turning the LED Indicator On or Off** on page 67).*

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## **Setting the Squelch Level**

You can adjust your radio's squelch level to filter out unwanted calls with low signal strength or channels that have a higher than normal background noise.

**Settings:** Normal is the default. Tight filters out (unwanted) calls and/or background noise. However, calls from remote locations may also be filtered out.

### **Procedure:**

Press the programmed **Squelch** button to toggle squelch level between normal and tight.

### **OR**

Follow the procedure below.

- 1  to access the menu.

---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.

---

- 4  or  to Squelch and press  to select.

---

- 5 The display shows Tight and Normal.  or  to the required setting and press  to enable. ✓ appears besides selected setting.

---

- 6 Screen returns to the previous menu.

---

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## **Turning the Introduction Screen On or Off**

You can enable and disable the Introduction Screen if needed.

### **Procedure:**

- 1  to access the menu.

---

  - 2  or  to Utilities and press  to select.

---

  - 3  or  to Radio Settings and press  to select.

---

  - 4  or  to Intro Screen and press  to select.

---

  - 5 Press  to enable Introduction Screen. The display shows ✓ beside Enabled.
- OR**
- Press  to disable Introduction Screen. The ✓ disappears from beside Enabled.
- 

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## Language

You can set your radio display to be in your required language.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Language and press  to select.
- 5  or  to the required language and press  to enable. ✓ appears beside selected language.

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## Turning the LED Indicator On or Off

You can enable and disable the LED Indicator if needed.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to LED Indicator and press  to select.
- 5 Press  to enable LED indicator. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable LED indicator. The ✓ disappears from beside Enabled.

*The display backlight, and buttons backlighting are automatically turned off if the LED indicator is disabled (see **Controlling the Display Backlight on page 65**).*

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## Turning the Voice Operating Transmission (VOX) Feature On or Off

This feature allows you to initiate a hands-free voice activated call on a programmed channel. The radio automatically transmits, for a programmed period, whenever the microphone on the VOX-capable accessory detects voice.

Pressing the **PTT** button during radio operation will disable VOX. To re-enable VOX, do **one** of the following:

- Turn the radio off and power it on again, **OR**
- Change the channel via the Channel Selector Knob, **OR**
- Follow the procedure below.

**NOTE:** Turning this feature on or off is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

### **Procedure:**

Press the programmed **VOX** button to toggle the feature on or off.

### **OR**

Follow the procedure below.

- 1  to access the menu.

---

- 2  or  to Utilities and press  to select.

---

- 3  or  to Radio Settings and press  to select.

- 4  or  to VOX.

- 5 Press  to enable VOX. The display shows ✓ beside Enabled.

### **OR**

- 5 Press  to disable VOX. The ✓ disappears from beside Enabled.

*If the Talk Permit Tone feature is enabled (see **Turning the Talk Permit Tone On or Off on page 63**), use a trigger word to initiate the call. Wait for the Talk Permit Tone to finish before speaking clearly into the microphone.*

**NOTE:** At Step 4, you can also use  or  to change the selected option.

## Voice Announcement

This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

Use the following features to toggle Voice Announcement on or off.

### Procedure:

Press the programmed **Voice Announcement** button.

**OR**

Follow the procedure below.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Settings and press  to select.
- 4  or  to Voice Announcement.
- 5 Press  to enable Voice Announcement. The display shows ✓ beside Enabled.

**OR**

Press  to disable Voice Announcement. The ✓ disappears from beside Enabled.

**NOTE:** At Step 3, you can also use  or  to change the selected option.

### **Call Forwarding**

You can enable your radio to automatically forward voice calls to another radio.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Call Forward.
- 4 Press  to enable Call Forwarding. The display shows ✓ beside Enabled.

**OR**

Press  to disable Call Forwarding. The ✓ disappears from beside Enabled.

**NOTE:** At Step 3, you can also use  or  to change the selected option.

## Menu Timer

Set the period of time your radio stays in the menu before it automatically switches to the Home screen.

### Procedure:

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Menu Timer and press  to select.

---
- 5  or  to the required setting and press  to enable.

---

## Analog Mic AGC (Mic AGC-A)

This feature controls the your radio's microphone gain automatically while transmitting on an analog system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

### Procedure:

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Analog Mic AGC.

---
- 5 Press  to enable Analog Mic AGC. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Analog Mic AGC. The ✓ disappears from beside Enabled.

---

**NOTE:** At Step 3, you can also use  or  to change the selected option.

## Digital Mic AGC (Mic AGC-D)

This feature controls the your radio's microphone gain automatically while transmitting on an digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

### Procedure:

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Digital Mic AGC.

---
- 5 Press  to enable Digital Mic AGC. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Digital Mic AGC. The ✓ disappears from beside Enabled.

**NOTE:** At Step 3, you can also use  or  to change the selected option.

## Intelligent Audio

Your radio automatically adjusts its audio volume to overcome current background noise in the environment.

Use the following features to toggle Intelligent Audio on or off.

### Procedure:

Press the programmed **Intelligent Audio** button to toggle the feature on or off.

### OR

Follow the procedure below.

- 1  to access the menu.

---
- 2  or  to Utilities and press  to select.

---
- 3  or  to Radio Settings and press  to select.

---
- 4  or  to Intelligent Audio.

---
- 5 Press  to enable Intelligent Audio. The display shows ✓ beside Enabled.  
**OR**  
Press  to disable Intelligent Audio. The ✓ disappears from beside Enabled.

**NOTE:** At Step 3, you can also use  or  to change the selected option.

## Accessing General Radio Information

Your radio contains information on the following:

- Battery
- Radio Alias and ID 
- Firmware and Codeplug Versions
- Software Update

**NOTE:** Press  at any time to return to the previous screen or long press  to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

## Accessing the Battery Information

Displays information on your radio battery.

### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Info and press  to select.
- 4  or  to Battery Info and press  to select.

- 5 The display shows the battery information.

### OR

For **IMPRES** batteries **ONLY**: The display reads Recondition Battery if the battery requires reconditioning in an IMPRES charger.

After the reconditioning process, the display then shows the battery information.

---

## Checking the Radio Alias and ID

Displays the ID of your radio.

### Procedure:

Press the programmed Radio Alias and ID button to check your radio alias and ID. You hear a positive indicator tone.

### OR

Follow the procedure below.

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Info and press  to select.
- 4  or  to My Number and press  to select.
- 5 The first line of the display shows the radio alias. The second line of the display shows the radio ID.

You can also press the programmed **Radio Alias and ID** button to return to the previous screen.

## **Checking the Firmware Version and Codeplug Version**

Displays the firmware and codeplug versions on your radio.

### **Procedure:**

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Info and press  to select.
- 4  or  to Versions and press  to select.
- 5 The display shows the current firmware and codeplug versions.

## **Software Update**

Displays the date and time of the latest software update carried out via Over-the-Air Programming.

### **Procedure:**

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Radio Info and press  to select.
- 4  or  to SW Update and press  to select.

- 5 The display shows the date and time of the latest software update.

See **Over-the-Air Programming (OTAP)** on page 62 for details on OTAP.

Software Update menu is only available after at least one successful OTAP session.

## **RSSI Values**

Your radio shows the Received Signal Strength Indicator (RSSI) icon at the top of your display. This feature allows you to view the RSSI values.

### **Procedure:**

When you are on the Home screen:

- 1 Press  three times (--) and immediately press  three times (--) , all within 5 seconds.
- 2 The display shows the current RSSI values.  
Long press the  button to return to the Home screen.

See **Display Icons** on page 14 for details on the RSSI icon.

## ■ Front Panel Programming (FPP)

---

Your radio is able to customize certain feature parameters to enhance the use of your radio.

### Entering FPP Mode

#### Procedure:

- 1  to access the menu.
- 2  or  to Utilities and press  to select.
- 3  or  to Program Radio and press  to select.

**NOTE:** Long press  at any time to return to the Home screen.

### Editing FPP Mode Parameters

Use the following buttons as required while navigating through the feature parameters.

,  – Scroll through options, increase/decrease values, or navigate vertically.

 – Select the option or enter a sub-menu.

 – Short-press to return to previous menu or to exit the selection screen. Long-press to return to Home screen.

---

## Accessories

Your radio is compatible with the accessories listed in this chapter. Contact your dealer for details.

### ■ Antennas

---

- VHF, 136 – 155MHz, Helical Antenna (PMAD4117\_)
- VHF, 144 – 165MHz, Helical Antenna (PMAD4116\_)
- VHF, 152 – 174MHz, Helical Antenna (PMAD4118\_)
- VHF, 136 – 148MHz, Stubby Antenna (PMAD4119\_)
- VHF, 146 – 160MHz, Stubby Antenna (PMAD4120\_)
- UHF, 403 – 450MHz, Stubby Antenna (PMAE4069\_)
- UHF, 440 – 490MHz, Stubby Antenna (PMAE4070\_)
- UHF, 470 – 527MHz, Stubby Antenna (PMAE4071\_)
- UHF, 403 – 527MHz, Slim Whip Antenna (PMAE4079\_)

### ■ Batteries

---

- IMPRES Li-Ion Slim , 1500mAH IP56 Battery (PMNN4417\_)
- Core Slim Li-Ion, 1500mAH IP56 Battery (PMNN4416\_)
- IMPRES Li-Ion Non-FM, 2150mAH IP56 Battery (PMNN4418\_)

### ■ Cables

---

- Programming Cable USB (PMKN4115\_)
- Programming Cable Slim Connector to DB25 and USB Plug (PMKN4117\_)

### ■ Carry Devices

---

- Hard Leather Carry Case with 3-Inch Fixed Belt Loop for Limited Keypad Radio (PMLN5863\_)
- Hard Leather Carry Case with 3-Inch Swivel Belt for Limited Keypad Radio (PMLN5865\_)
- Hard Leather Carry Case with 2.5-Inch Swivel Belt Loop for Limited Keypad Radio (PMLN5867\_)
- Nylon Carry Case with 3-Inch Fixed Belt Loop for Limited Keypad Radio (PMLN5869\_)
- Belt Clip for 2-Inch Belt Width (PMLN4651\_)

- Belt Clip for 2.5-Inch Belt Width (PMLN7008\_)
- 2.5-Inch Replacement Leather Swivel Belt Loop (PMLN5610\_)
- 3-Inch Replacement Leather Swivel Belt Loop (PMLN5611\_)

## ■ Chargers

---

- IMPRES Single-Unit Charger, Base Only (WPLN4226\_)
- IMPRES Single-Unit Charger (WPLN4255\_)
- IMPRES Single-Unit Charger with Switch Mode Power Supply (WPLN4232\_)
- IMPRES Single-Unit Charger (WPLN4256\_)
- IMPRES Multi-Unit Charger, Base Only (WPLN4211\_)
- IMPRES Multi-Unit Charger, UK Plug (WPLN4214\_)
- IMPRES Multi-Unit Charger with Display Base Only (WPLN4218\_)
- IMPRES Multi-Unit Charger with Display, Euro Plug (WPLN4220\_)
- IMPRES Multi-Unit Charger with Display, UK Plug (WPLN4221\_)
- Assembly, Accessory, LTD SUC IMPRESS SMPS Euro (WPLN4255\_)
- IMPRES Multi-Unit Charger with Display, Argentina Plug (WPLN4223\_)
- IMPRES Single Unit Charger, US Plug (WPLN4232\_)
- IMPRES Single Unit Charger, Euro Plug (WPLN4234\_)
- IMPRES Single Unit Charger, Argentina Plug (WPLN4236\_)
- IMPRES Single Unit Charger, Brazil Plug (WPLN4281\_)
- Single Unit Charger, US Plug (NNTN8275\_)
- Single Unit Charger, Euro Plug (NNTN8273\_)
- Single Unit Charger, Argentina Plug (NNTN8225\_)
- Single Unit Charger, Brazil Plug (NNTN8280\_)
- IMPRES Multi Unit Charger, US Plug (WPLN4212\_)
- IMPRES Multi Unit Charger, Euro Plug (WPLN4213\_)
- IMPRES Multi Unit Charger, Argentina Plug (WPLN4216\_)
- IMPRES Multi Unit Charger with Display, US Plug (WPLN4219\_)

## ■ Earbuds and Earpieces

---

- Earbud with In-Line Mic/PTT, MagOne (PMLN5733\_)
- Earpiece In-Line Mic/PTT Swivel, MagOne (PMLN5727\_)
- Earset with Boom Microphone, MagOne (PMLN5732\_)
- Receive-Only Covered Earbud with Coiled Cord, for Remote Speaker Microphone (AARLN4885\_)
- Receive-Only Flexible Earpiece for Remote Speaker Microphone (WADN4190\_)
- D-Shell Receive Only Earpiece (One Size) for Remote Speaker Microphone (PMLN4620\_)
- Receiver-Only Earpiece with Translucent Tube and Rubber Eartip for Remote Speaker Microphone (RLN4941\_)

## ■ Headsets and Headset Accessories

---

- Heavy Duty Headset, Noise Cancelling with In-Line PTT (PMLN5731\_)

## ■ Remote Speaker Microphones

---

- IMPRES Remote Speaker Microphone Large, Noise Cancelling with 3.5mm Jack (PMMN4071\_)
- IMPRES Remote Speaker Microphone Small, with 3.5mm Jack (PMMN4073\_)

- Remote Speaker Microphone Small, No Emergency, IP57 (PMMN4075\_)
- Remote Speaker Microphone Small with 3.5mm Jack (PMMN4076\_)

## ■ Surveillance Accessories

---

- 2-Wire Surveillance Kit, Black (PMLN5724\_)
- 2-Wire Surveillance Kit, Beige (PMLN5726\_)

## ■ Miscellaneous Accessories

---

- Adjustable Black Nylon Carrying Strap (Attaches to D-Ring on Carry Case) (NTN5243\_)
- Universal Chest Pack (HLN6602\_)
- Break-A-Way Chest Pack with Radio Holder, Pen Holder and Velcro Secured Pouch (RLN4570\_)
- Replacement Strap for HLN6602\_ and RLN4570\_ (1505596Z02)
- RadioPAK Radio Utility Case (Fanny Pack) (RLN4815\_)
- RadioPAK Extension Belt (for Waists Larger than 40 Inch) (4280384F89)
- Waterproof Bag with Large Strap (HLN9985\_)
- Small Clip, Epaulet Strap (RLN4295\_)
- 1.75 Inch Wide Leather Belt (4200865599)



## Batteries and Chargers Warranty

### The Workmanship Warranty

The workmanship warranty guarantees against defects in workmanship under normal use and service.

All MOTOTRBO Batteries	Two (2) Years
IMPRES Chargers (Single-Unit and Multi-Unit, Non-Display)	Two (2) Years
IMPRES Chargers (Multi-Unit with Display)	One (1) Year

### The Capacity Warranty

The capacity warranty guarantees 80% of the rated capacity for the warranty duration.

Lithium-Ion (Li-Ion) Batteries	12 Months
IMPRES Batteries, When Used Exclusively with IMPRES Chargers	18 Months

# Limited Warranty

## MOTOROLA COMMUNICATION PRODUCTS

### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS, INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

DEP Series Digital Portable Radios	Three (3) Years
Product Accessories (Excluding Batteries, Chargers and Mag One Accessories)	One (1) Year
Mag One Accessories	Six (6) Months

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or

transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA.

Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

### II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA'S option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR

CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

### III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

### IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service.

### V. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.

- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Rechargeable batteries if:
  - (1) any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - (2) the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

## VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

## VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, U.S.A.





**MOTOROLA**

Motorola Solutions, Inc.  
1303 East Algonquin Road  
Schaumburg, Illinois 60196 U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2012 Motorola Solutions, Inc. All rights reserved. July 2012.

[www.motorolasolutions.com/mototrbo](http://www.motorolasolutions.com/mototrbo)



**68012004090-C**